



1: 拧开四颗螺丝，螺丝保留好。再取原本装饰头。

1: Unscrew the four screws and keep them.
Then take the original decorative head.

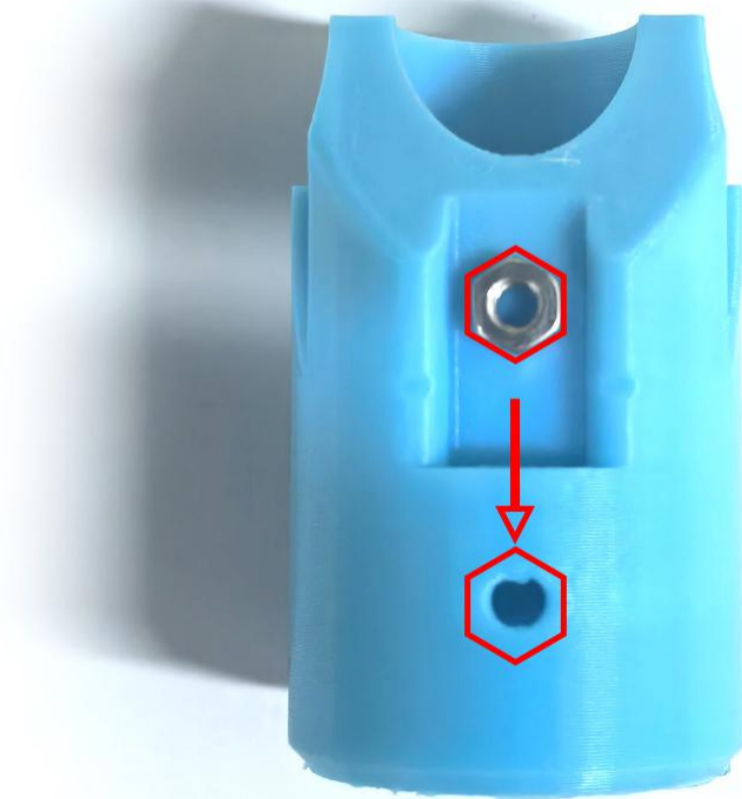


2: 安装螺母，摆好螺母方向，放入卡槽里

2: Install the nut, orient the nut and put it into the slot.

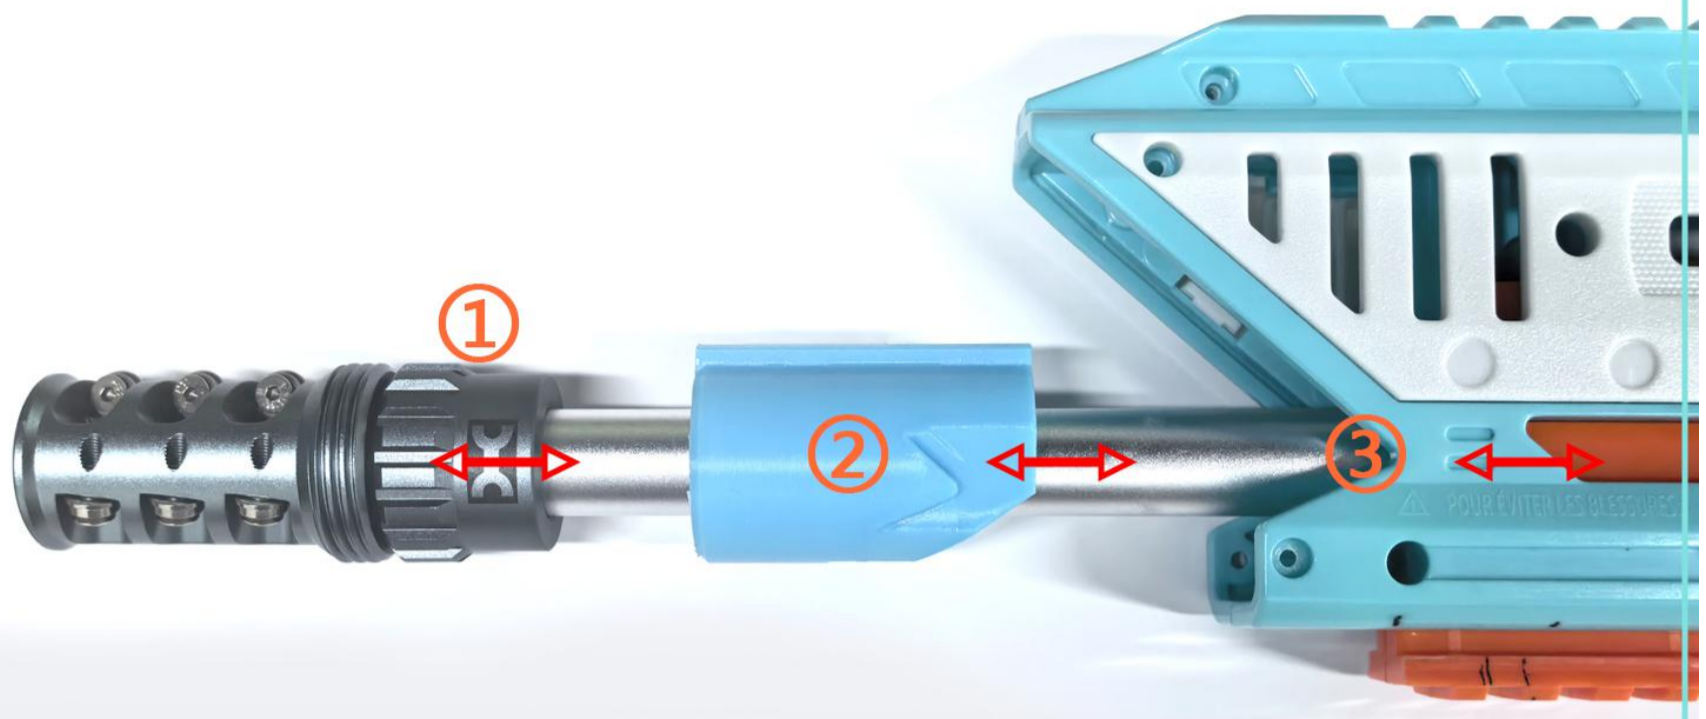


3: 先把轴承安装在铝管上，再穿过固定环（注意方向），最后安装在发射器上。

3: First install the bearing on the aluminum tube, then pass through the fixing ring (pay attention to the direction), and finally install it on the transmitter.

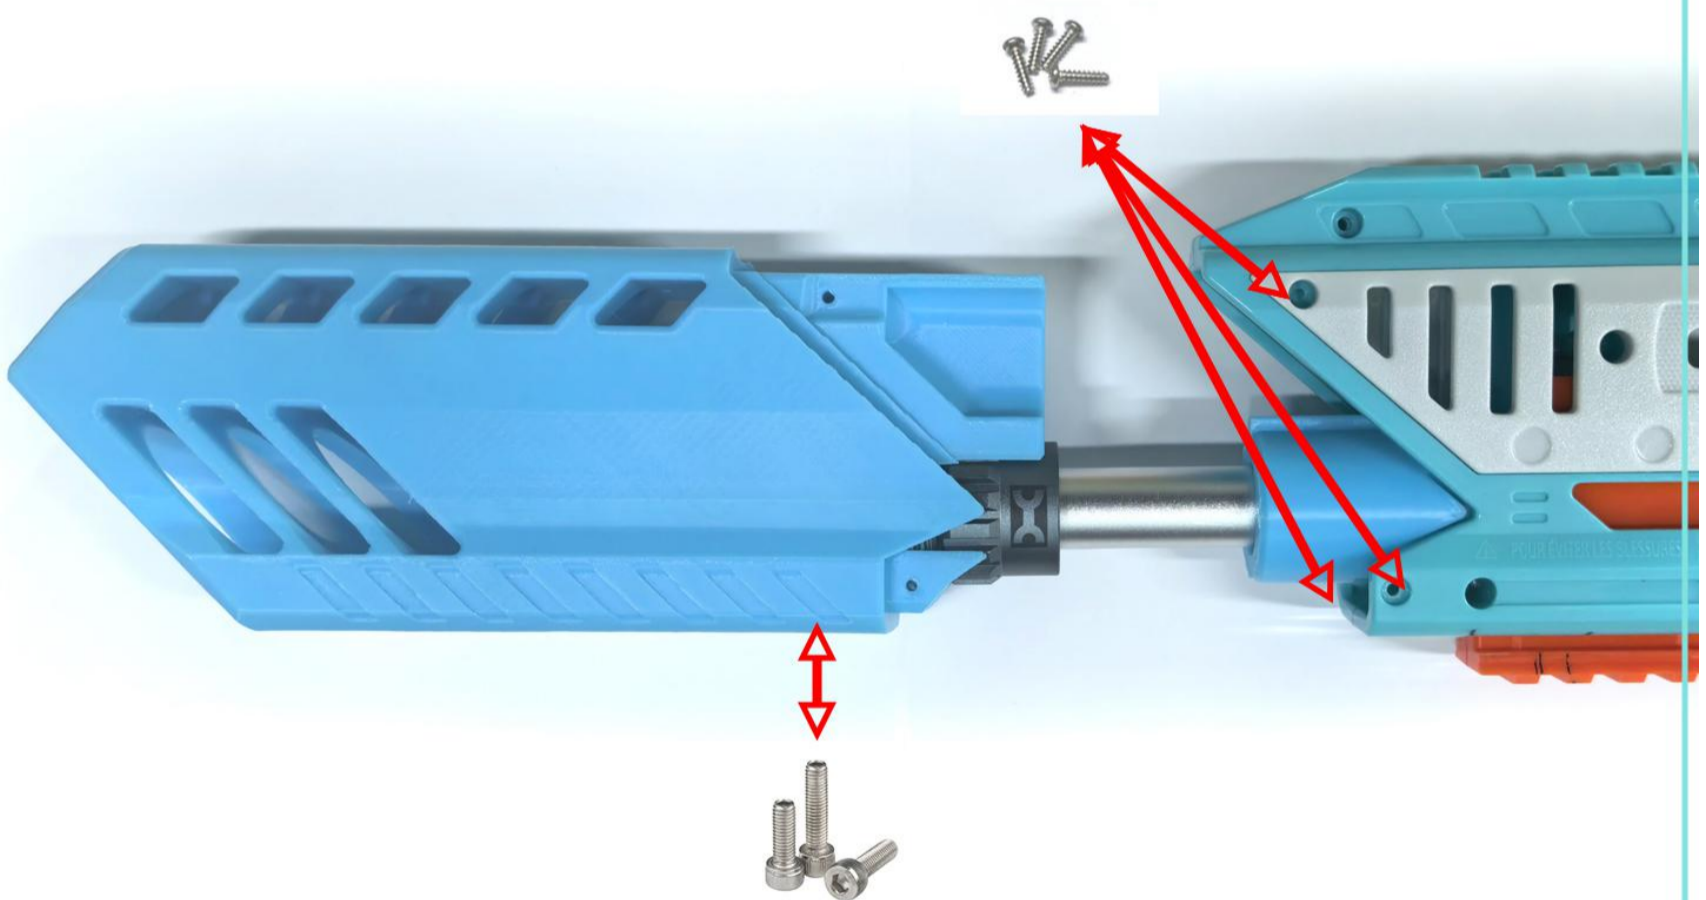

4: 安装前管，拧上步骤1取下的4颗螺丝。再安装一颗杯头螺丝。杯头螺丝可以固定铝管

4: Install the front pipe and screw on the four screws removed in step 1. Install another cup head screw. Cup head screws can fix aluminum tubes.

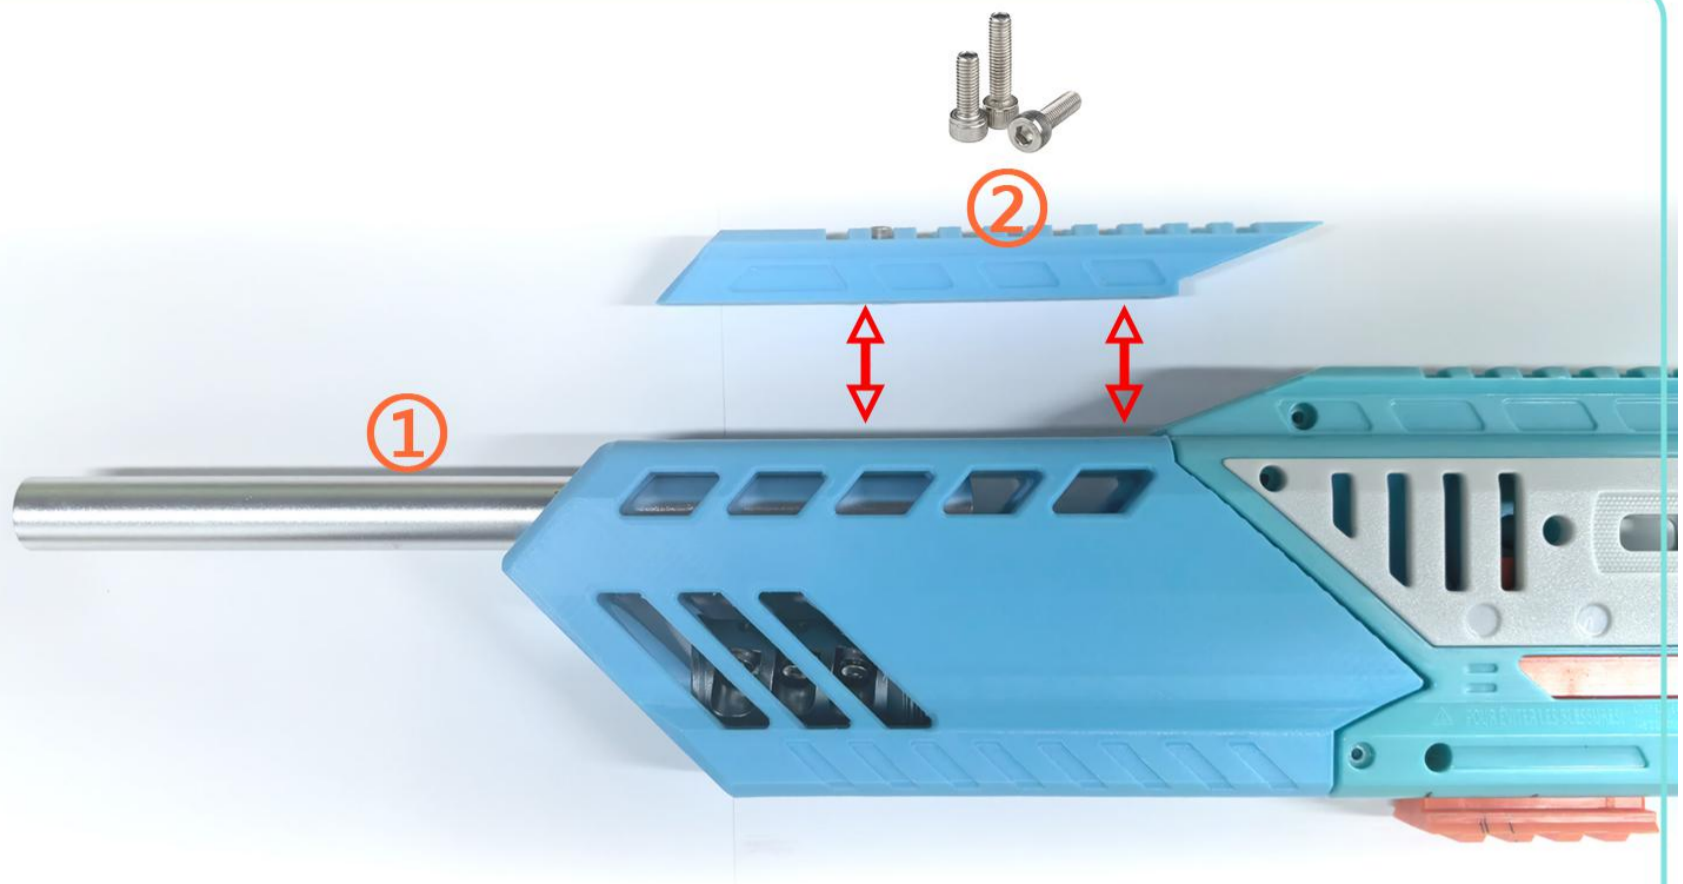

5: 安装铝管，再安装2颗杯头螺丝。杯头螺丝可以固定导轨和铝管
5: Install the aluminum tube, and then install 2 cup head screws.
Cup head screws can fix the guide rail and aluminum tube.